

WONDERWARE (AVEVA)

Aveva Edge Lisanslama



BAUTEK BİLGİ TEKNOLOJİLERİ

DİJİTAL DÖNÜŞÜM YOLCULUĞUNUZDA PUSULANIZ.

Dijital dönüşüm yolculuğunuzun neresindesiniz? Nereden başlayacağınızı biliyor musunuz? Kapsamlı bir dijital dönüşüm stratejisi, işletmeniz için sürdürülebilir bir geleceğe giden yol haritanızı oluşturmaktadır.

BAUTEK olarak operasyonel mükemmelliğe yönelik sağladığımız dijital çözümlerimizle operasyonlarınızı daha sürdürülebilir, daha etkin, daha verimli hale getirebilir, kaynak kullanımını düşürerek minimize edebilir ve kazanç miktarını arttırarak gelir maksızımızınızı sağlayabiliyoruz.

Türkiye'de ve dünyada öncü markaların tercihi olan çözümlerimizle operasyonel süreçlerden yönetsel süreçlere tüm faaliyetlerinizi zaman ve mekân sınırlaması olmadan **7/24** yönetebilirsiniz.

Operasyonel Mükemmelliğe yönelik dijitalizasyon çözümlerimiz;

- SCADA Çözümleri,
- Endüstriyel IT/OT Entegrasyon Platform,
- MES - Üretim Yönetim Sistemi Çözümleri (OEE Performans | Operasyon | Kalite)
- Endüstriyel Veri Toplama (Historian Server) ve Raporlama,
- Üretim Veri Toplama ve İzlenebilirlik,
- Ekipman Varlık ve Kestirimci Bakım Yönetimi,
- Enerji İzleme ve Enerji Performans Yönetimi,
- Saha Mobil Prosedür ve Dijital Prosedür Yönetim,
- Operatör Performans Destek ve Dijital Kaizen,
- İş Akış Yönetim Sistemi Çözümleri,
- OT PLC-SCADA Uygulama Yedek ve Değişim Yönetim,
- Reçete ve Batch Yönetim,
- Alarm Yönetim ve OPC Server (Tunneler),
- ERP Entegrasyon Çözümleri ve daha fazlası...

Ayrıca sektörlerde özel, işletmelerin ihtiyaçlarına yönelik sunduğumuz en etkili endüstriyel yazılım çözümlerimiz hakkında ayrıntılı bilgi almak, teknik döküman ve demo uygulamaları incelemek için bizimle iletişime geçebilirsiniz.

AVEVA Edge License Activation

Activate your AVEVA Edge License.

Select the type of license you want to activate and follow the instructions:

Install or Upgrade a Softkey license on the PC – Development (IDE) and/or Full Runtime

Close AVEVA Edge (make sure that the process “Studio Manager.exe” is not running)

Run the “Register” module (Windows button > “Register”)

Select “Softkey > Check > Change License”

Copy the “Hardware Identifier”

Visit our site to activate the license. You need your Wonderware credentials to log in to the site. You may also be asked the “License Serial Number” for the purchased license. Paste the “Hardware Identifier” into the web form and click submit.

If a valid “Hardware Identifier” has been entered, then a license “Activation Code” is returned. Copy/paste or type the code in the “Activation Code” field from the “Register” module, and then click Authorize. The new license settings are saved on the computer and a confirmation message is displayed. If the new “Activation Code” is not validated, an error message is displayed. If this happens, double-check that you have entered the “Activation Code” correctly. If you still get an error message, visit technical support page to contact our technical support department.

Install or Upgrade a Softkey license on an embedded device – EmbeddedView, CEView, or IoTView

Run Remote Agent (CEServer.exe) on the runtime device

Open AVEVA Edge IDE on your development computer

Click on the “Connect” icon from the “Home” tab on the ribbon interface

Type the IP address of the runtime station, and click on “Connect”

Select the “Embedded License” tab from the “Remote Management” dialog and copy the “Hardware Identifier”

Visit our site to activate the license. You need your Wonderware credentials to log in to the site. You may also be asked the “License Serial Number” for the purchased license. Paste the “Hardware Identifier” into the web form and click submit.

If a valid “Hardware Identifier” has been entered, then a license “Activation Code” is returned. Copy/paste or type the code in the “Activation Code” field from the “Remote Management” dialog, and then click Send. The new license settings are saved on the runtime device and a confirmation message is displayed. If the new “Activation Code” is not validated, an error message is displayed. If this happens, double-check that you have entered the “Activation Code” correctly. If you still get an error message, visit technical support page to contact our technical support department.

Upgrade a USB Hardkey license on the PC remotely – Development (IDE) or Full Runtime

Close AVEVA Edge (make sure that the process “Studio Manager.exe” is not running)

Run the “Register” module (Windows button > “Register”)

Select “Hardkey > Check > Change License”

Copy the “Hardware Identifier”

Visit our site to activate the license. You need your Wonderware credentials to log in to the site. You may also be asked the “License Serial Number” for the purchased license. Paste the “Hardware Identifier” into the web form and click submit.

If a valid “Hardware Identifier” has been entered, then a license “Activation Code” is returned. Copy/paste or type the code in the “Activation Code” field from the “Register” module, and then click Authorize. The new license settings are saved on the computer and a confirmation message is displayed. If the new “Activation Code” is not validated, an error message is displayed. If this happens, double-check that you have entered the “Activation Code” correctly. If you still get an error message, visit technical support page to contact our technical support department.

Upgrade a USB Hardkey license on an embedded device – EmbeddedView, CEView, or IoTView

Plug the USB Hardkey (token) into your runtime device

Run Remote Agent (CEServer.exe) on the runtime device

Open the AVEVA Edge IDE on your development computer

Click on the “Connect” icon from the “Home” tab on the ribbon interface

Type the IP address of the runtime station, and click on “Connect”

Select the “Embedded License” tab from the “Remote Management” dialog and copy the “Hardware Identifier”

Visit our site to activate the license. You need your Wonderware credentials to log in to the site. You may also be asked the “License Serial Number” for the purchased license. Paste the “Hardware Identifier” into the web form and click submit.

If a valid “Hardware Identifier” has been entered, then a license “Activation Code” is returned. Copy/paste or type the code in the “Activation Code” field from the “Remote Management” dialog, and then click Send. The new license settings are saved on the runtime device and a confirmation message is displayed. If the new “Activation Code” is not validated, an error message is displayed. If this happens, double-check that you have entered the “Activation Code” correctly. If you still get an error message, visit technical support page to contact our technical support department.

Install a new USB Hardkey license on any device

Simply plug the USB Hardkey (token) into your computer - as simple as that!



“Operasyonel Mükemmellik”
mottosuyla sunduğumuz yazılım
çözümleri ile yatırımlarınızdan
maksimum getiriyi sağlayacak
optimizasyon fırsatlarını keşfetmeye
hemen başlayın.

www.bautek-tr.com

